


Fry Up, Fry Up XL

EN	Electric griddle	
	Operating manual	5


© 2021 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or be patent pending. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.




1

Fry Up

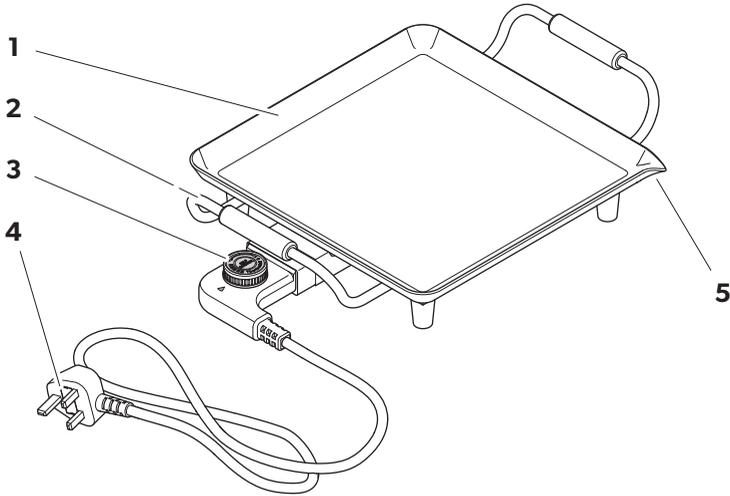

Fry Up XL

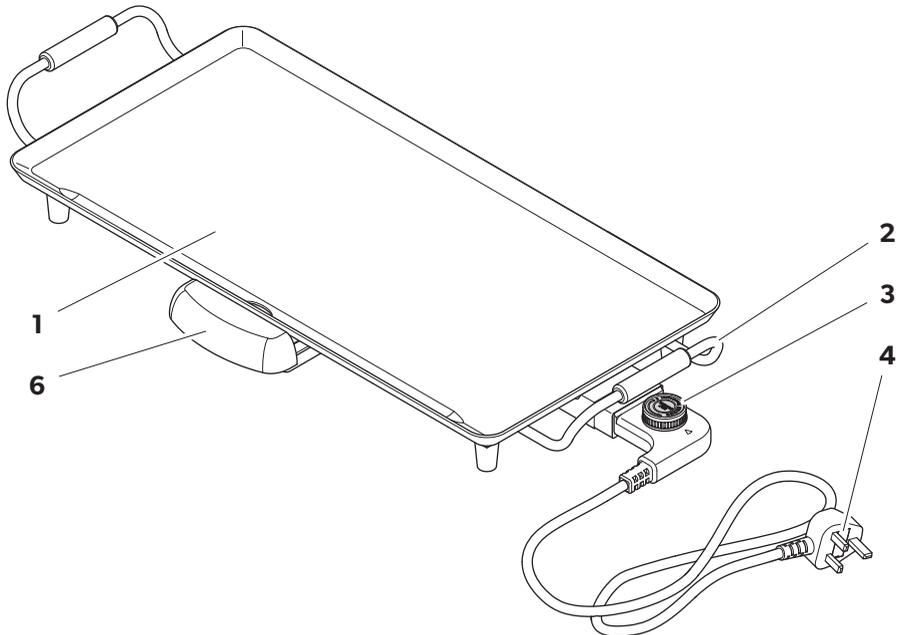

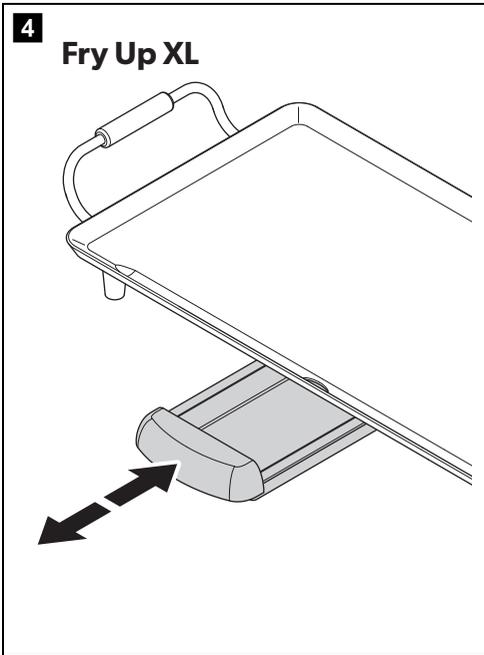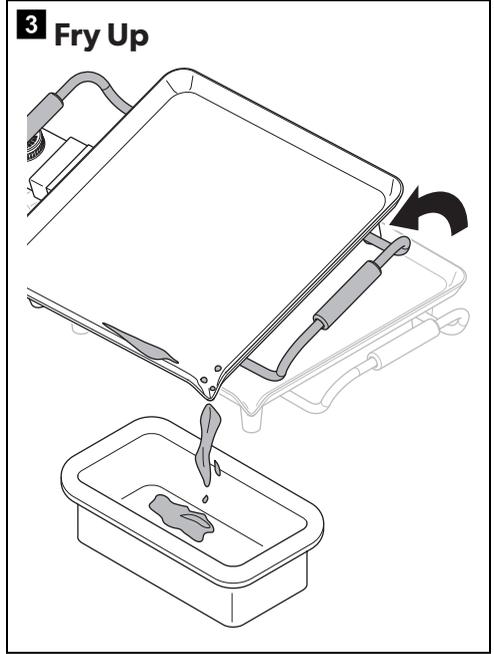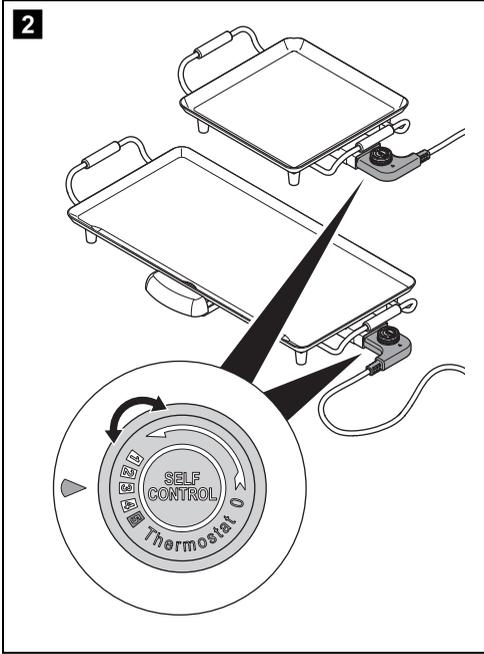

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit kampaoutdoors.com.

Explanation of symbols



WARNING!

Safety instruction: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION!

Safety instruction: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



NOTICE!

Indicates a situation that, if not avoided, can result in property damage.



NOTE

Supplementary information for operating the product.

Safety instructions

General safety



WARNING! Failure to obey these warnings could result in death or serious injury.

Electrocution hazard

- If this griddle's power cable is damaged, the power cable must be replaced by the manufacturer, a service agent or a similarly qualified person in order to prevent safety hazards.
- This griddle may only be repaired by qualified personnel. Improper repairs can lead to considerable hazards.
- Avoid the power cord, plug or other electrical parts to get in contact with water or any other liquid.

- Do not allow the cord to get in touch with any hot surface of the griddle.

Health hazard

- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved.
- Children shall not play with the device.
- Cleaning and user maintenance shall not be made by children without supervision.
- Close supervision is necessary when the device is used by or near children.

Operating the device safely



WARNING! Failure to obey these warnings could result in death or serious injury.

Electrocution hazard

- Do not operate the griddle if it is visibly damaged.
- Only use accessories that are recommended by the manufacturer.

Fire hazard

- This appliance must be kept away from flammable materials during use.
- Do not place the device near naked flames or other heat sources (heaters, gas ovens etc.).
- When positioning the device, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the device.
- Do not let the cord hang over the edge of a table or counter.
- Never turn the device on unless the device is fully and properly assembled.

Burn hazard

- Accessible parts may be very hot. Keep young children away.

Health hazard

- Only operate the device when an adult can attend to the device.



CAUTION! Failure to obey these cautions could result in minor or moderate injury.

Burn hazard

- Do not move the device during use.
- Leave the device to cool down properly before you touch the device with bare hands.



NOTICE! Indicates a situation that, if not avoided, can result in property damage.

- Check that the voltage specification on the type plate corresponds to that of the energy supply.
- Never pull the plug out of the socket by the cable.

Intended use

The electric griddle is suitable for:

- cooking and frying food
- domestic use

The electric griddle is **not** suitable for:

- use as a heating device
- outdoor use
- operation by means of an external timer or a separate remote-control system

This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operating or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or connection, including excess voltage
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Kampa reserves the right to change product appearance and product specifications.

Technical description

The electric griddle is equipped with a drip outlet (**FryUp**) or a pull-out drip tray (**FryUpXL**).

The temperature can be adjusted using the temperature control knob.

Product overview

No. in fig. 1, page 3	Description
1	Griddle plate
2	Handle
3	Temperature control knob
4	AC plug
5	Drip outlet (FryUp)
6	Drip tray (FryUp XL)

Using the electric griddle

Before each use

- Clean the griddle plate with a soft, damp cloth.

Switching on



WARNING! Fire hazard

- Do not leave the griddle unattended, especially when oil is to be heated.
- Keep the griddle away from any other sources of heat and flammable materials.
- Always turn the temperature control knob off and unplug the griddle from the socket when the griddle is not in use.



CAUTION! Burn hazard

- Do not touch the hot parts of the device during and after use. Leave the device to cool down properly.

1. Place the griddle on a stable horizontal surface, for example on a table.

2. Insert the plug into the socket.

Setting the temperature

- Turn the temperature control knob to the desired position (see fig. **2**, page 4).

Cooking and frying food



NOTICE!

Do not use any metal utensils as this could damage the non-stick coating of the griddle plate.



NOTE

- The griddle plate needs about 10 minutes for heating up.
- Cooking time depends on the nature and size of the food and your personal preference.
- To avoid the food drying out, turn the food only once.

Switching off

1. Unplug the device from the socket.
2. Ensure that the device is fully cooled down before leaving the device unattended.

After each use

- Clean the griddle plate (see chapter “Cleaning and maintenance” on page 7).

Cleaning and maintenance



WARNING!

Electrocution hazard

- Unplug the griddle from the socket before cleaning and maintenance.

Burn hazard

- Ensure that the device is fully cooled down before cleaning.



NOTICE!

- Never clean the griddle under running water or in dish water.
- Do not use sharp or hard objects, abrasive cleaning agents or bleach during cleaning as these can damage the griddle.

Removing food residues

- After each use, remove food residues with a paper towel or a damp cloth.

FryUp only:

1. Place a receptacle suitable for collecting liquid next to the griddle.
2. Pour excess liquid from the griddle plate into the receptacle (see fig. **3**, page 4).

FryUp XL only:

1. Pull out the drip tray (see fig. **4**, page 4).
2. Empty the drip tray.
3. Clean the drip tray with a soft, damp cloth and a mild cleaning agent.

Cleaning the griddle plate

- Clean the griddle plate with a soft, damp cloth and a mild cleaning agent.

Storing the electric griddle

1. Before storing, clean the griddle (see chapter “Cleaning and maintenance” on page 7).
2. Allow the griddle to dry completely.
3. Store the griddle in a dry place.

Warranty

The statutory warranty period applies. If the product is defective, please contact the manufacturer's branch in your country (see kampaoutdoors.com/store-locator) or your retailer.

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchase date
- A reason for the claim or description of the fault

Disposal

► Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

Technical data

	FryUp	FryUpXL
Connection voltage:	230 V	
Power consumption:	800 W	1500 W
Dimensions (W x H x D):	420 x 115 x 310 mm	590 x 110 x 275 mm
Weight:	1.14 kg	1.53 kg
Conformity:	The CE mark and the UKCA mark are displayed side-by-side in a large, bold font.	



Together outdoors

kampaoutdoors.com

Part of the Dometic Group

We distribute our products in around 100 markets. Please ask for your contact point or check the web. kampaoutdoors.com

Manufacturer: Dometic UK Awnings Limited, Witham, Essex, UK

Importer EU: Dometic Germany GmbH, Hollefeldstraße 63, 48282 Emsdetten, Germany