
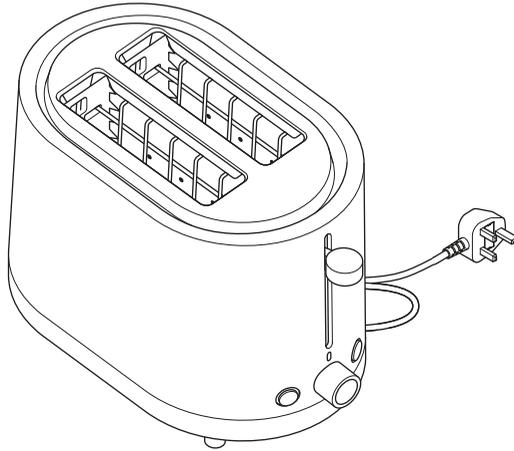
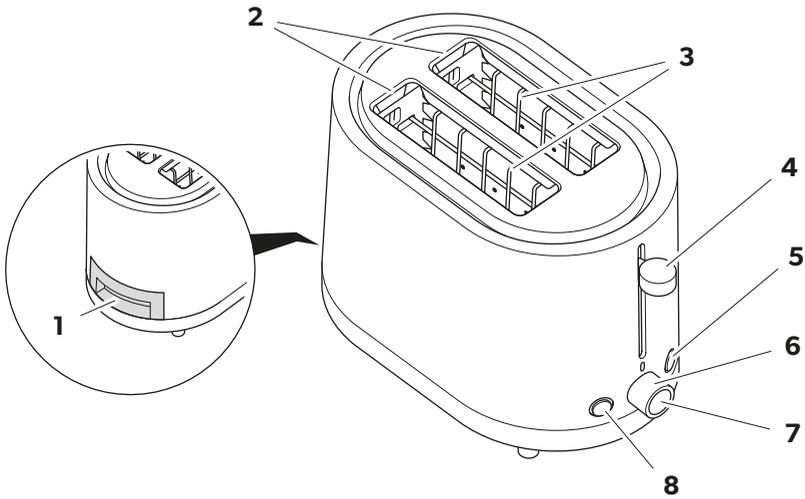
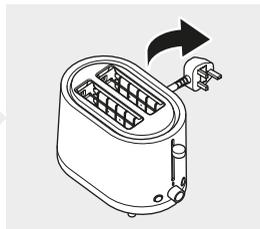
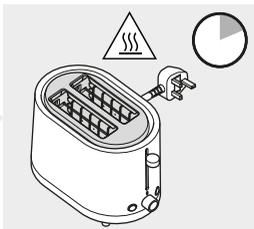
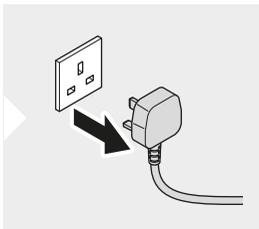
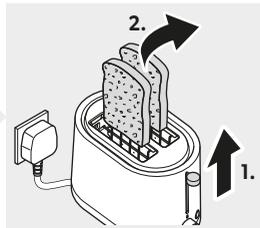
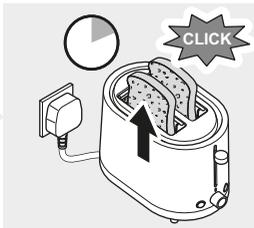
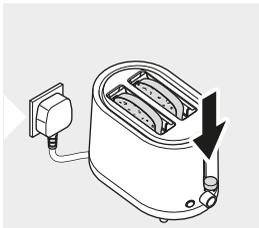
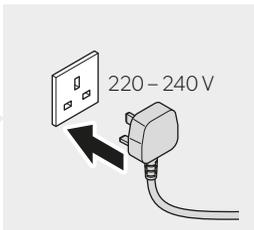


**Deco**










© 2021 Dometic Group. The visual appearance of the contents of this manual is protected by copyright and design law. The underlying technical design and the products contained herein may be protected by design, patent or be patent pending. The trademarks mentioned in this manual belong to Dometic Sweden AB. All rights are reserved.

**1****2**










3

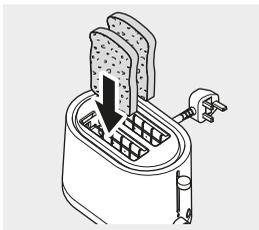


4

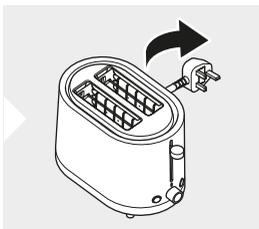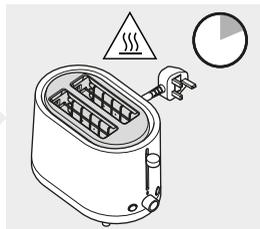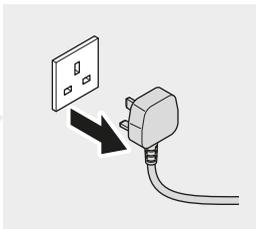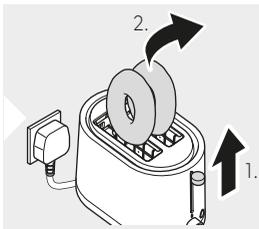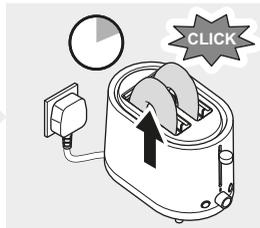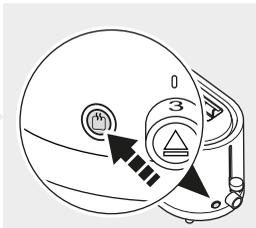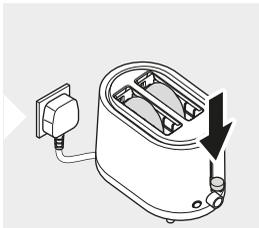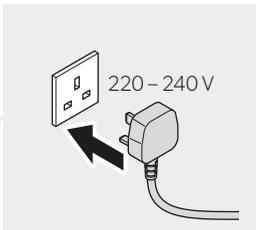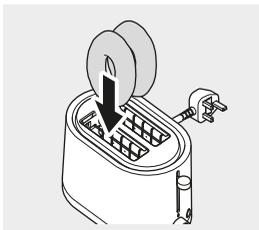

5

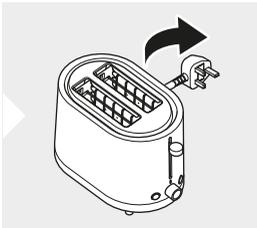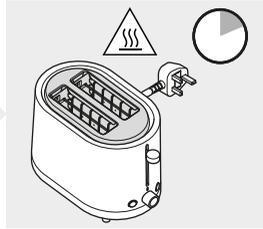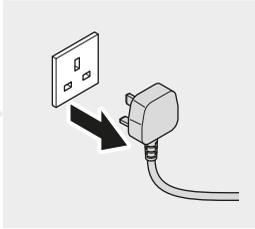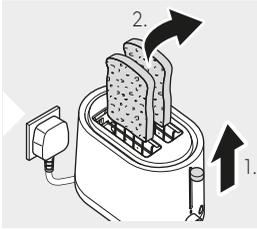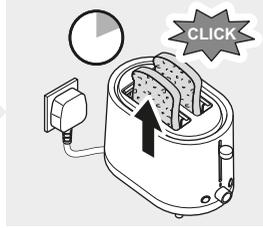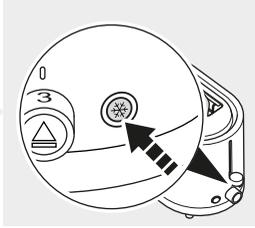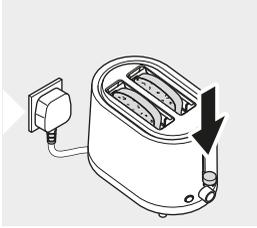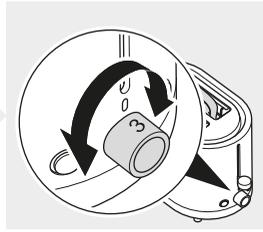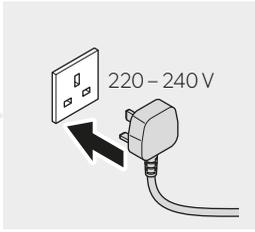

6

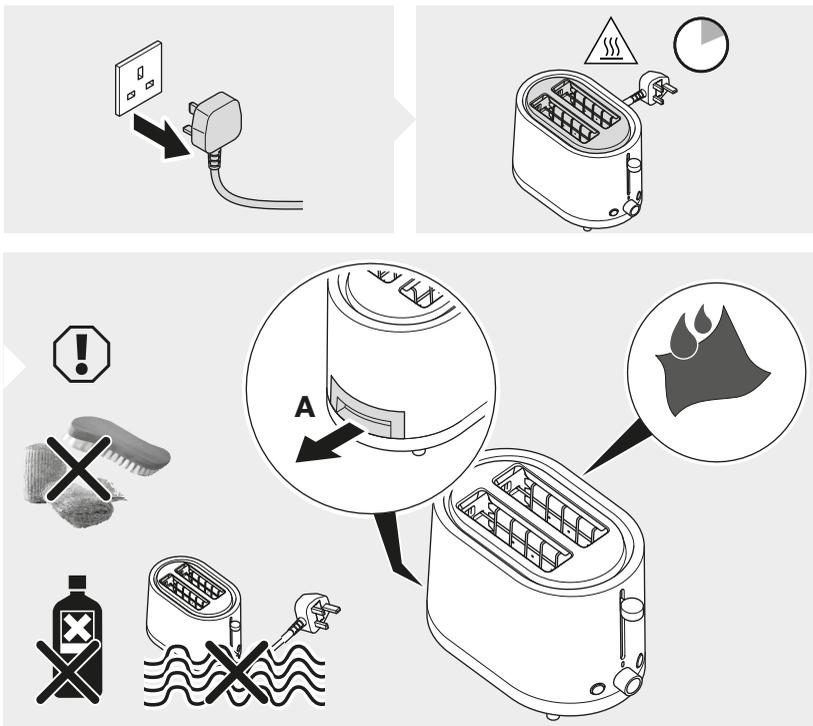

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit [www.kampaoutdoors.com](http://www.kampaoutdoors.com).

## Contents

Explanation of symbols . . . . .	8
Safety instructions . . . . .	8
Scope of delivery . . . . .	9
Intended use . . . . .	9
Using the device . . . . .	9
Cleaning the device . . . . .	9
Disposal . . . . .	10
Warranty . . . . .	10
Technical data . . . . .	10

## Explanation of symbols



### WARNING!

**Safety instruction:** Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



### CAUTION!

Hot surfaces. Do not touch.

## Safety instructions



### WARNING!

#### Health hazard

- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved.

- Children must be supervised to ensure that they do not play with the device.
- Cleaning shall not be conducted by children without supervision.
- Only operate the device when you or another person can attend to it.
- Do not place the supply cord over a counter or table top where it can be pulled or tripped over.
- Do not place any paper, plastic or other nonfood items in the device.
- Do not place the device or its supply cord on or near a heated surface or in a heated oven.
- Do not use the device near water.
- Bread can burn. Therefore the device must not be used near or below curtains and other combustible materials such as curtains, drapes or wood (e. g. shelving, cupboards).
- Do not move the device during operation.
- Do not toast rice cakes, fried breads, oversized breads, foods with frosting/jelly or non-bread items.
- Do not attempt to dislodge bread when the device is plugged into an electrical outlet.
- Turn off and unplug this device when not in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the device when the supply cord or the plug is damaged.
- Do not use the device after the device malfunctions or has been damaged in any manner.
- Leave the device to cool down properly before you touch it with bare hands.
- Do not wrap the supply cord tightly around the device as this may cause the supply cord to fray or break.
- We do not recommend using an extension cable with this device.  
However, if an extension cable is used, the marked electrical rating should be at least as great as the electrical rating of this device.

## Scope of delivery

► See fig. **1**, page 3.

## Intended use

The toaster Kampa Deco is intended for toasting bread, bagels, waffles or pastries.

This toaster is for domestic use indoors only.

This toaster is not intended to be used for defrosting foods other than frozen bread, bagels, waffles or pastries.

This toaster is not intended to be operated by an external timer or remote control.

This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operating or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or connection, including excess voltage
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in this manual

Kampa reserves the right to change product appearance and product specifications.

## Before initial use

- Remove all packaging.
- Be sure there are no packaging materials remaining in the slots.
- Operate the toaster twice without food (fig. **3**, page 4).

Remaining factory residue may burn off and result in minor smoke or smell, but this is normal.

## Using the device

### Parts identification (fig. **2**, page 3)

No.	Description
1	Removable crumb tray
2	Slots
3	Grids
4	Carriage lever
5	 Defrost button
6	Browning level control: 1 (light) ... 7 (dark)
7	 Release button Press to stop toasting
8	 Bagel button

## Placing the device

When selecting the location for placing the device, observe the following instructions:

- The ground must be firm, level, dry, heat-resistant and stable.
- Never place the device near or on flammable materials.
- When using, leave at least 8 cm (3 in) clearance on all sides of the toaster.

## Toasting bread, waffles and pastries

► Proceed as shown (fig. **3**, page 4).

## Toasting bagels

► Proceed as shown (fig. **4**, page 5).

## Toasting deep-frozen pastries

► Proceed as shown (fig. **5**, page 6).

## Cleaning the device



### WARNING!

Crumbs will accumulate and become a fire hazard! Empty the crumb tray frequently (fig. **6** A, page 7).

► Proceed as shown (fig. **6**, page 7).

## Disposal

► Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

## Warranty

The statutory warranty period applies. If the product is defective, please contact the manufacturer's branch in your country (see [kampaoutdoors.com/store-locator](http://kampaoutdoors.com/store-locator)) or your retailer.

For repair and warranty processing, please include the following documents when you send in the device:

- A copy of the receipt with purchase date
- A reason for the claim or description of the fault

## Technical data

	<b>Deco</b>
Ref. no.:	9120001389, 9120001390, 9120001391
Connection voltage:	220 – 240 V~, 50 Hz
Power consumption:	1000 W
Dimensions (H x W x D):	184 x 165 x 254 mm (7¼ x 6½ x 10 in)
Weight:	1.2 kg
Certification:	





**Together outdoors**

**[kampaoutdoors.com](https://kampaoutdoors.com)**

Part of the Dometic Group

We distribute our products in around 100 markets. Please ask for your contact point or check the web. [kampaoutdoors.com](https://kampaoutdoors.com)

Manufacturer: Dometic UK Awnings Limited, Witham, Essex, UK

Importer EU: Dometic Germany GmbH, Hollefeldstraße 63, 48282 Emsdetten, Germany